




5 Wire trigger/push button into beacon

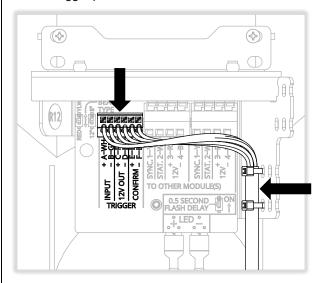


6 Ensure cable ties installed

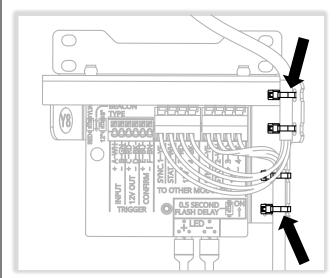

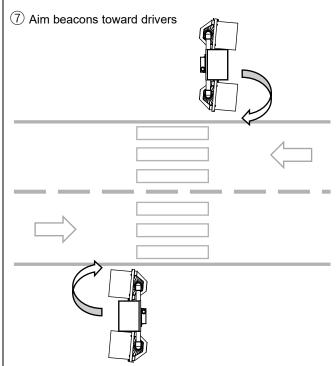


 For alternating flashing, set flash delay switch on one of the beacon circuit boards to "ON"

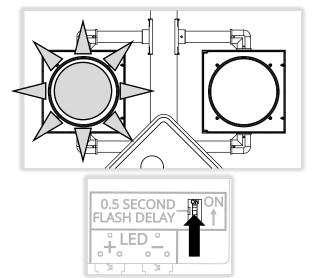

NOTE

For more than two beacons, set delay switches to yield desired flash behavior.

9 Ensure beacon modules are closed securely

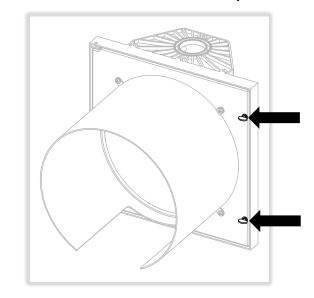



TO COMPLETE SETUP: Use MX Field App to program/link modules and change default settings. Download: carmanah.com/app



FOR REMOTE ACCESS: Log into MX Cloud: MXcloud.live

Maintenance

Periodically clean the surface of the product with water and a soft cloth. A mild non-abrasive cleanser can be used for more stubborn residue. Clean more frequently during drier months. Check for any damaged, missing or broken hardware.

Warranty

This product is covered by the Carmanah warranty. Failure to comply with the use, storage, maintenance or installation instructions detailed in the supplied documentation could void the warranty.

Email: customersupport@carmanah.com
Toll Free: 1.877.722.8877 (US & Canada)

Worldwide: 1.250.380.0052 Web: carmanah.com

NOTE: READ ALL INCLUDED INSTALL GUIDES
BEFORE SYSTEM INSTALLATION

90702REVB