

**NOTE**

MX 400 cabinet hidden for clarity; door switch kit can be installed with power module chassis in cabinet.


1. Fasten door switch bracket to power module chassis captive nuts with provided screws, lock washers, flat washers and spacers as shown.

**NOTE**

Spacers must be installed between switch bracket and chassis for proper switch operation.


**NOTE**

Door switch should operate correctly when screws centered in door switch bracket. Can be adjusted if necessary.


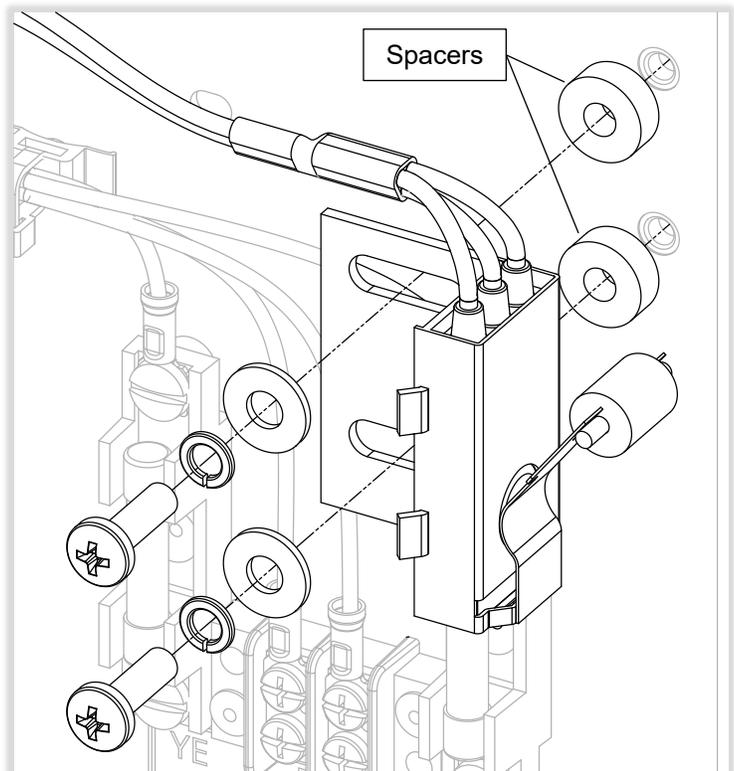




2. Push two cable tie mounts into power module chassis holes as shown.

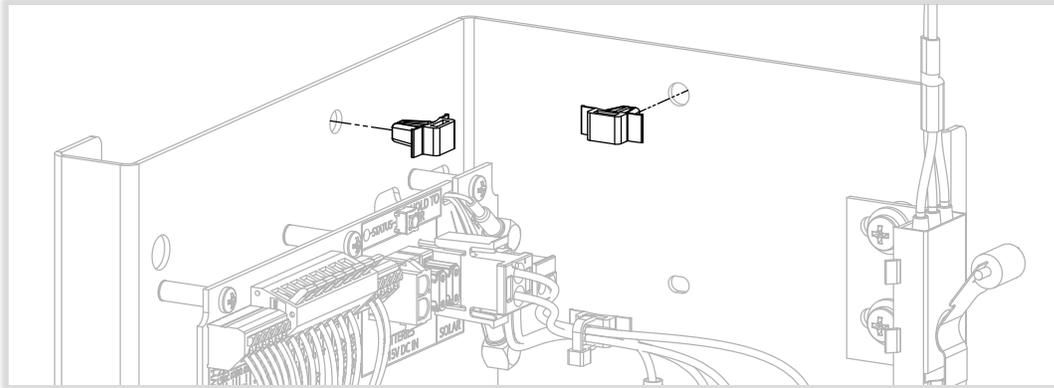

3. Route and secure door switch wires with cable ties provided. Leave cable ties loose and untrimmed.

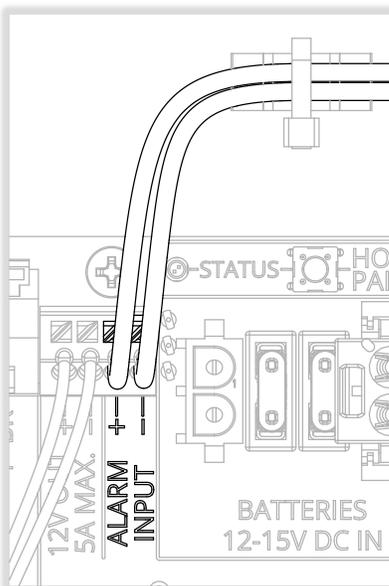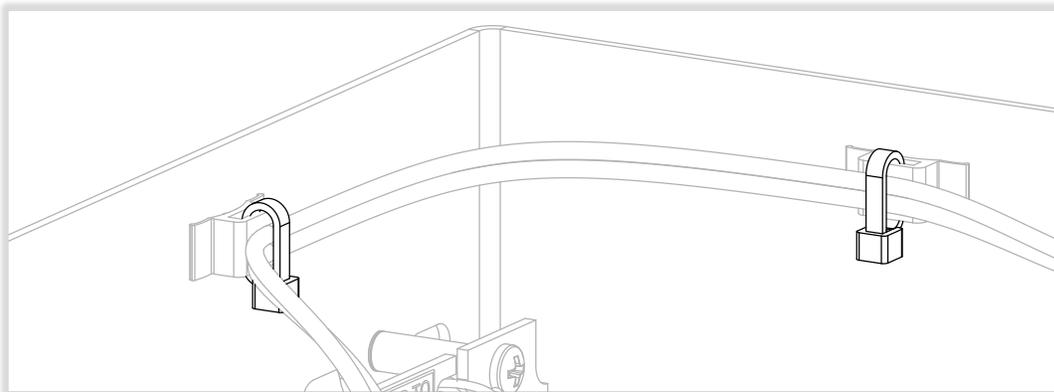

4. Remove insulation from pre-stripped switch wires and insert into power module Alarm Input terminals, using a suitable tool to depress terminal buttons. Tighten and trim cable ties.

**NOTE**

Switch wires can be installed into Alarm Input terminals in either polarity.

5. Connect to system in MX Field App. In Advanced Settings, Security, set Door Switch to Enabled. See MX Field App Guide for details.

**NOTE: READ ALL INCLUDED INSTALL GUIDES BEFORE SYSTEM INSTALLATION**